



Upstream IL's and downstream IL's are indicated in the order of section chainages, and are in the order of fall within the drainage network.

Scale: 1:250H 1:50V @ AC