

Wood's
Tree Consultancy Ltd

APPENDIX 2
**GUIDANCE FOR WORKING IN ROOT
PROTECTION AREAS (RPAS)**

What is the purpose of this guidance?

This guide sets out the general principles that must be followed when working in RPAs. Where more detail is required, it will be supplemented by illustrative specifications in other appendices of this Arboricultural method statement. Before work starts on site, the purpose of this guidance is to demonstrate to the council that tree protection issues have been properly considered and to provide a written record of how they will be implemented. Once the site works start, this guidance is specifically for the site personnel to help them understand what has been agreed and explain what is required to fully meet their obligations to protect trees. All personnel working in RPAs must be properly briefed about their responsibilities towards important trees based on this guidance.

What are RPAs?

RPAs are the areas surrounding important trees where disturbance must be minimised if they are to be successfully retained. All RPAs close to the construction area are illustrated on the tree protection plans accompanying this guidance. Damage to roots or degradation of the soil through compaction and/or excavation within RPAs is likely to cause serious damage. Any work operations within RPAs must be carried out with great care if trees are to be successfully retained.

When this guidance should be followed:

Anyone entering an RPA must follow this guidance if important trees are to remain unharmed. Anyone working in an RPA must take care to minimise excavation into existing soil levels and limit any fill or covering that may adversely affect soil permeability. There are two main scenarios where this guidance must be followed when entering and working within an RPA: -

Removal of existing surfacing/structures and replacement with new surfacing, structures and/or landscaping.

Preparation and installation of new surfacing, structures and/or landscaping.

Broad definitions of surfacing, structures and landscaping are set out in the following sections.

Where does this guidance apply?

This guidance should always be read in conjunction with the site plans illustrating the areas where specific precautions are necessary. Each area where precautions are required is annotated on the plans as identified on the key. All plans are illustrative and intended to be interpreted in the context of the site conditions when the work is started. All protective measures should be installed according to the prevailing site conditions and agreed as satisfactory by the appropriate supervising officer before any demolition or construction work starts.

What references is this guidance based on?

This guidance assumes that the minimum general standards for development issues are those set out in British Standards Institution (2012) BS 5837: Trees in relation to design, demolition and construction

Recommendations and National Joint Utilities Group (1995) Publication Number 10: Guidelines for the planning, installation and maintenance of utility services in proximity to trees.

Preventing adverse impact to the RPA beyond the immediate work area:

Any part of the RPA beyond the agreed work area must be isolated from the work operations by protective barriers or ground protection to at least the minimum standard described in BS 5837 for the duration of the work.

Excavation and dealing with roots:

All excavation must be carried out carefully using spades, forks and trowels, taking care not to damage the bark and wood of any roots. Specialist tools for removing soil around roots using compressed air may be an appropriate alternative to hand digging, if available. All soil removal must be undertaken with care to minimise the disturbance of roots beyond the immediate area of excavation. Where possible, flexible clumps of smaller roots, including fibrous roots, should be retained if they can be displaced temporarily or permanently beyond the excavation without damage. If digging by hand, a fork should be used to loosen the soil and help locate any substantial roots. Once roots have been located, the trowel should be used to clear the soil away from them without damaging the bark. Exposed roots to be removed should be cut cleanly with a sharp saw or secateurs 10-20cm behind the final face of the excavation. Roots temporarily exposed must be protected from direct sunlight, drying out and extremes of temperature by appropriate covering. Roots greater than 2.5cm in diameter should be retained where possible. Roots 2.5-10cm in diameter should only be cut in exceptional circumstances. Roots greater than 10cm in diameter should only be cut after consultation with the appropriate supervisory officer.

Arboricultural supervision:

Any work within RPAs requires a high level of care. Qualified Arboricultural supervision is essential to minimise the risk of misunderstanding and misinterpretation. Site personnel must be properly briefed before any work starts. Ongoing work must be inspected regularly, and, on completion, the work must be signed off by the Arboriculturist to confirm compliance by the contractor. In the context of this guidance, an appropriate supervising officer would normally be an Arboriculturist.

MOVING SURFACING/STRUCTURES IN RPAS:

Definitions of surfacing and structures:

For the purposes of this guidance, the following broad definitions apply: -

Surfacing:

Any hard surfacing used as a vehicular road, parking or pedestrian path includes tarmac, solid stone, crushed stone, compacted aggregate, concrete and timber decking. This does not include compacted soil with no hard covering.

Structures:

Any man-made structure above or below ground including service pipes, walls, gate piers, buildings and foundations. Typically, this would include drainage structures, car ports, bin stores and concrete slabs that support buildings.

Access:

Roots frequently grow adjacent to, and beneath existing surfacing/structures so great care is needed during access and demolition. Damage can occur through physical disturbance of roots and/or the compaction of soil around them from the weight of machinery or repeated pedestrian passage. This is not generally a problem whilst surfacing/structures are in place because they spread the load on the soil beneath and further protective measures are not normally necessary. However, once they are removed and the soil below is newly exposed, damage to roots becomes an issue and the following guidance must be observed: -

No vehicular or repeated pedestrian access into RPAs unless on existing hard surfacing or custom designed ground protection.

Regular vehicular and pedestrian access routes must be protected from compaction with temporary ground protection as set out in BS 5837.

RPAs exposed by the work must be protected as set out in BS 5837 until there is no risk of damage from the development activity.

Removal:

Removing existing surfacing/structures is a high-risk activity for any adjacent roots and the following guidance must be observed: -

Appropriate tools for manually removing debris may include a pneumatic breaker, crowbar, sledgehammer, pick, mattock, shovel, spade, trowel, fork and wheelbarrow. Secateurs and a handsaw must also be available to deal with any exposed roots that have to be cut.

Machines with a long reach may be used if they can work from outside RPAs or from protected areas within RPAs. They must not encroach onto unprotected soil in RPAs.

Debris to be removed from RPAs manually must be moved across existing hard surfacing or temporary ground protection in a way that prevents compaction of soil. Alternatively, it can be lifted out by machines provided this does not disturb RPAs.

Great care must be taken throughout these operations not to damage roots as set out above.

If appropriate, leaving below ground structures in place should be considered if their removal may cause excessive root disturbance.

INSTALLATION OF NEW SURFACING IN RPAS:

Basic principles:

New surfacing is potentially damaging to trees because it may require changes to existing ground levels, resulting in localised soil structure degradation and/or disrupt the efficient exchange of water and gases in and out of the soil. Mature and over-mature trees are much more prone to suffer because of these changes than young and maturing trees. Adverse impact on trees can be reduced by minimising the extent of these changes in RPAs.

Generally, the most suitable surfacing will be relatively permeable to allow water and gas movement, load spreading to avoid localised compaction and require little or no excavation to limit direct damage. The actual specification of the surfacing is an engineering issue that needs to be considered in the context of the bearing capacity of the soil, the intended loading and the frequency of loading. The details of product and specification are beyond the scope of this guidance and must be provided separately by the appropriate specialist.

Establishing the depth of excavation and surfacing gradient:

The precise location and depth of roots within the soil is unpredictable and will only be known when careful digging starts on site. Ideally, all new surfacing in RPAs should be no-dig, i.e. requiring no excavation whatsoever, but this is rarely possible on undulating surfaces. New surfacing normally requires an evenly graded sub-base layer, which can be made up to any high points with granular, permeable fills such as crushed stone or sharp sand. This sub-base must not be compacted as would happen in conventional surface installation. Some limited excavation is usually necessary to achieve this and need not be damaging to trees if carried out carefully and large roots are not cut. Tree roots and grass roots rarely occupy the same soil volume at the top of the soil profile, so the removal of a turf layer up to 5cm is unlikely to be damaging to trees. It may be possible to dig to a greater depth depending on local conditions, but this would need to be assessed by an Arboriculturist if excavation beyond 5cm is anticipated. On undulating surfaces, finished gradients/levels must be planned with sufficient flexibility to allow on-site adjustment if excavation of any high points reveals large, unexpected roots near the surface. If the roots are less than 2.5cm in diameter, it would normally be acceptable to cut them, and the gradient formed with the preferred minimal excavation of up to 5cm. However, if roots over 2.5cm in diameter are exposed, cutting them may be too damaging and further excavation may not be possible. If that is the case, the surrounding levels must be adjusted to take account of these high points by filling them

with suitable material. If this is not practical and large roots have to be cut, the situation should be discussed with the supervising officer before a final decision is made.

Basic and finishing layers:


Once the sub-base has been formed, the load spreading construction is installed on top without compaction. In principle, the load spreading formation will normally be cellular and filled with crushed stone although the detail may vary with different products. Suitable surface finishes include washed gravel, permeable tarmac or block pavers set on a sand base. However, for lightly loaded surfacing of limited widths (<2m) such as pedestrian paths, pre-formed concrete slabs may be appropriate if the sub-base preparation is as set out above. In some situations, limited width floating concrete rafts constructed directly on to the soil surface may be acceptable, but the design must not include any strip-dug supports.

Edge retention:

Conventional kerb edge retention set in concrete filled trenches is likely to result in damage to roots and should be avoided. Effective edge retention in RPAs must be custom designed to avoid any significant excavation into existing soil levels. For most surfaces, the use of pre-formed edging secured by metal pins or wooden pegs is normally an effective way of minimising any adverse impact on trees from the retention structure.

Installing new surfacing on top of existing surfacing:

In some instances, existing surfacing can be retained and used as a base for new surfacing. Normally, this will not result in significant excavation that could expose roots so special precautions are not necessary. However, if large roots already protrude above the proposed sub-base level, then the precautions and procedures set out above must be observed.

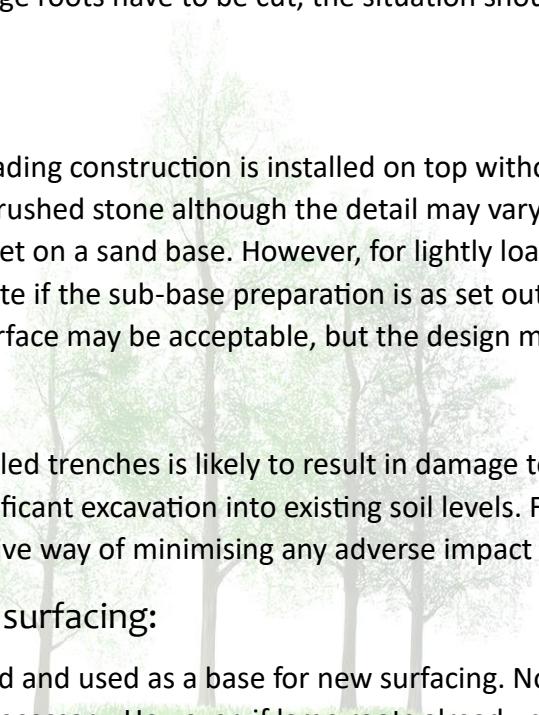

Wood's
Tree Consultancy Ltd

INSTALLATION OF NEW STRUCTURES WITHIN RPAS:

Basic principles:

New structures in RPAs are potentially damaging to trees because they may disturb the soil and disrupt the existing exchange of water and gases in and out of it. Mature and over-mature trees are much more prone to suffer because of these changes than young and maturing trees. Adverse impact on trees can be reduced by minimising the extent of these changes in RPAs. This can be done by constructing the main structures above ground level on piled supports and redirecting water to where it is needed. The detailed design and specification of such structures is an engineering issue that should be informed and guided by tree expertise.

Small sheds and bin stores: These light structures do not normally require substantial foundations and can have permeable bases. Ideally, their bases should be of a no-dig, load spreading construction set directly on to the soil surface. They require a flat base and so an undulating site will need levelling to provide a suitable surface. Excavation of any high points by up to 5cm and filling depressions with permeable fill to provide a flat base will normally be acceptable provided no roots greater than 2.5cm in diameter need to be cut. If large roots are found, the preferred course of action would be to raise the base level of the structure by filling rather than cutting roots.

However, if this is not practical and large roots have to be cut, the situation should be discussed with the supervising officer before a final decision is made. Above the base, there will often be a protective covering fixed onto a frame that can rise directly from the base or be fixed to supports either banged into the ground or set in carefully dug holes. Provided the supports are well spaced, i.e. greater than 1.5m apart, and of a relatively narrow diameter, i.e. not more than 15cm, it is unlikely they will cause any significant disturbance to RPAs.

Walls, gate piers, buildings and bridges on new foundations: Conventional strip foundations in RPAs for any significant structure may cause excessive root loss and are unlikely to be acceptable. However, disturbance can be significantly reduced by supporting the above ground part of the structures on small diameter piles and beams or cast floor slabs set above ground level. The design should be sufficiently flexible to allow the piles to be moved if significant roots are encountered in the preferred locations. Before the actual installation of the new structure starts, all RPAs that may be affected should be covered with temporary ground protection as set out in BS 5837. Gaps in the ground protection should be left where it is expected to install the piles or dig the holes for gate piers. Pile locations should be initially hand dug to a depth of 75cm to establish if there are any significant roots over 2.5cm in diameter that could be damaged. If significant roots are found, then the pile location must be moved slightly, and a new exploratory hole dug. Once the piles have been installed, the supporting beams for the structure must be raised above ground level between the piles and should not require any further excavation. The beams between the piles can be pre-cast and imported to the site ready to fix or can be cast in position using shuttering for the sides and a biodegradable void former for the base. Gate piers generally require larger holes and have less flexibility for relocation if large roots are found.

Localised loss of roots may be unavoidable so each situation should be assessed on its own merits by an appropriate supervising officer once the careful excavations have been completed. Any roots found should be dealt with as set out in "excavation and dealing with roots" section above. When installing any of these structures, the ground protection must remain in place until the construction is completed and there is no risk of damage to RPAs.

Walls on existing foundations:

A free-standing wall on an existing foundation is unlikely to require any additional excavation and so its construction should have no adverse impact on RPAs if the appropriate protection is in place. However, replacing walls that retain the soil of RPAs normally requires some limited excavation back into the exposed soil face to provide a working space of at least 10-20cm behind the inside wall face. This should be done carefully and limited to no more than required to construct the new wall. Any roots found should be dealt with as set out in "excavation and dealing with roots" section above. Once the wall is completed, any voids behind it should be filled with good quality topsoil and firmed into place but not over compacted. Specific difficulties with large roots that emerge during the construction should be referred to the supervising officer.

Services:

For the purposes of this guidance, services are considered as structures. Excavation to upgrade existing services or install new services in RPAs may damage retained trees and should only be chosen as a last resort. If excavation emerges as the preferred option, the decision should be reviewed by the supervising officer before any work is carried out. If excavation is agreed, all digging should be done carefully and follow the guidance set out in "excavation and dealing with roots" section above.

SOFT LANDSCAPING IN RPAS:

Upgrading existing soft landscaping or replacing existing surfacing/structures with new soft landscaping: For the purposes of this guidance, soft landscaping includes the re-profiling of existing soil levels and covering the soil surface with new plants or an organic covering (mulch). It does not include the installation of solid structures or compacted surfacing. Soft landscaping activity after construction can be extremely damaging to trees. No significant excavation or

Cultivation, especially by rotavators, should occur within RPAs. Where new designs require levels to be increased to tie in with new structures or the removal of an existing structure has left a void below the surrounding ground level, good quality and relatively permeable topsoil should be used for the fill. It should be firmed into place but not over compacted in preparation for turfing or careful shrub planting. Ideally, all areas close to tree trunks should be kept at the original ground level and have a mulched finish rather than grass to reduce the risk of mowing damage.